
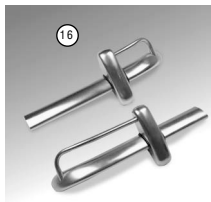
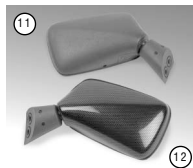
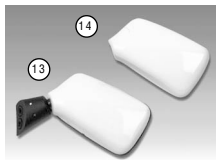


Mirrors and Bumpers

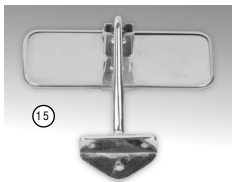

MIRRORS AND BUMPERS

1. GAM105 Classic shape chrome torpedo mirror with flat glass for wing fitting.
- (a) GAM105C Classic shape chrome torpedo mirror with convex glass for wing fitting.
(Convex glass makes objects appear smaller and further away.)
2. GAM106 Alloy torpedo mirror with flat glass for wing fitting.
3. Polished right hand door mirror complete with base and fitting.
- a. GAM215A R/H mirror with flat glass, stainless steel body.
- b. GAM217A R/H mirror with convex glass, stainless steel body.
- c. M688990E R/H mirror with flat glass, metal black body.
4. Polished left hand door mirror complete with base and fitting.
- a. CAM216A L/H mirror with flat glass, stainless steel body.
- b. GAM218A L/H mirror with convex glass, stainless steel body.
- c. M688991E L/H mirror with flat glass, metal black body.
5. Original Tex round chrome mirror as used in the 1960's.
- a. 8G8731 Round chrome mirror with convex glass.
- b. 8G8710 Round chrome mirror with flat glass.
6. Original Tex classic alternative oval shape to the round mirror in the 1960's.
- a. M50201 Classic shape chrome mirror with flat glass.
- b. M50211 Classic shape chrome mirror with flat glass.
7. M16007 Tex chrome short straight arm.
8. N16008 Tex chrome angled arm.
9. M16009 Tex chrome curved arm.
- 670 Headlamp Eyebrows, Chrome
11. JPC9848 Plastic door mirrors as fitted from 1980 on r/h. I/H-JPC9849
12. DMC92140 Plastic covers in carbon fiber weave look, to glue onto mirrors.
13. CRB1016NAL Rover white painted mirror as fitted on coopers 1994 on. I/H-CRB1016NAL.
14. DMC92141 White plastic covers to glue onto original plastic mirrors to create the Cooper look.
15. MS1144 Stainless steel/chrome interior mirror.
16. MS25 Original kit complete with bumpers, corner bars, overriders and all fittings.
17. KIT Front and rear kits of overider and corner bars, but less bumpers where purchasers wish to drill their own stainless steel bumpers. Reverse lamps fitted from 1983 on will have to be relocated using bracket MSSK024. (a) For cars pre 1997 or late coopers with 2 spot lamps only-MSSK025. (b) Cars with 4 spot lamps or 1997 on, a different front kit is used with original rear kit-MSSK026. (c) A front kit only for cars with 4 spot lamps or 1997 on. Has shorter corner bars-MSSK027.
18. BUMPER Stainless steel bumper with holes for corner bars can be ordered individually-14A9871. (a) Genuine Rover stainless steel bumper without holes-DPB10166. (b) Budget chrome bumper-14A6779MS. (c) Budget stainless steel bumper-DPB10166MS.
19. OVERIDER Stainless steel overider with hole for right hand front or left hand rear-14A9923. (a) Stainless steel overider with hole for left hand front and right hand rear-14A9924. (b) Plain stainless steel overider for mkll without holes-14A8738.
20. CORNERBAR Right hand front corner bar stainless steel- 14A9877 (a) Left hand front corner bar stainless steel-14A9878. (b) Right hand rear corner bar stainless steel- 14A9919. (c) Left hand rear corner bar stainless steel-14A9920.
21. KIT Fitting kit for mkll corner bars and overiders-MSSK010. Fitting kit for mkll overiders only-MSSK011.